


### T307007 Electric Park Leg Instructions

**Important:** read all the following steps before beginning installation.

1. Set the trailer level and determine the desired position for each of the parking legs / levellers. The levellers should be bolted to a substantial part of the trailer frame. Welding is **NOT** recommended.
2. The top and bottom clamping hangers for each leg must be mounted against steel members to ensure secure mounting. Position each leg so that the uppermost clevis pin sits just below the trailer. This is to allow easy adjustment of the foot pad. Mark the exact position for the mounting of each set of hangers, making sure that the legs are at the same height and that they are straight vertically. **NOTE:** The stop plates must be positioned under the clamping hangers.
3. Weld the two mount hangers in position.
4. Fit the leg into the mount hangers and retain with a bolt and nut (not supplied) through the outer holes in the mount hangers. Ensure the legs are firmly attached.

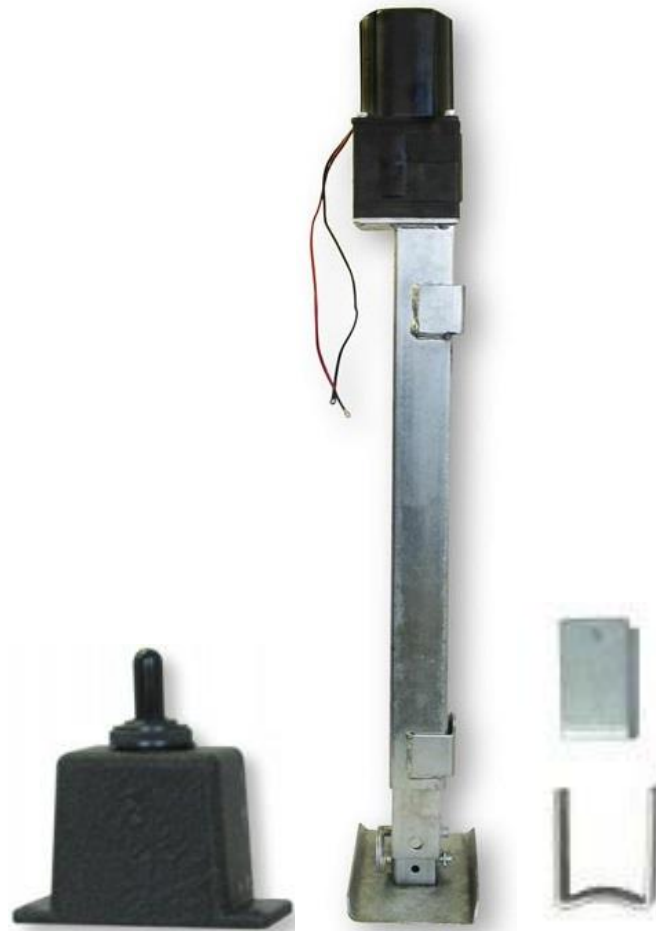

T307010 SWITCH & HOUSING, SUIT 307007

